

WARRANTY INFORMATION

5 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of five years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, visit our website at www.pattonproducts.com.

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, visit our website at www.pattonproducts.com.

WARRANTY INFORMATION

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

© 2013 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved.

Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Printed In China

PATTON®

Owner's Guide
Guía del usuario
PUH4842M



PATTON® Heater PATTON® Calefactor

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS
LEA Y CONSERVE ESTAS IMPORTANTES INSTRUCCIONES

PATTON®

GO ONLINE NOW to

<http://www.pattonproducts.com/PTNCLG201>

to receive a **FREE GIFT OR PROMO CODE***.

It's our “thanks” to you for being a Patton® brand customer.

*-You will also get access to special sale items
& promotions on a full assortment of Patton®
branded products.*

HURRY & SIGN UP TODAY!

**While supplies last; subject to availability.*

PATTON®

INGRESE AHORA MISMO al sitio

<http://www.pattonproducts.com/PTNCLG201>

para recibir un **OBSEQUIO GRATIS O UN CÓDIGO DE PROMOCIÓN***. Es nuestra manera de decirle “gracias” por ser cliente de la marca Patton®.

*-También obtendrá acceso a promociones y
artículos de venta especiales de una completa
variedad de productos de la marca Patton®.*

¡APRESÚRESE Y REGÍSTRESE HOY MISMO!

**Hasta agotar el stock; sujeto a disponibilidad.*

INFORMACION DE LA GARANTIA

GARANTÍA LIMITADA DE 5 AÑOS

Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, o en Canadá, Sunbeam Corporation (Canada) Limited operando bajo el nombre de Jarden Consumer Solutions, (en forma conjunta, “JCS”), garantiza que por un período de cinco años a partir de la fecha de compra, este producto estará libre de defectos de materiales y mano de obra. JCS, a su elección, reparará o reemplazará este producto o cualquier componente del mismo que presente defectos durante el período de garantía. El reemplazo se realizará por un producto o componente nuevo o reparado. Si el producto ya no estuviera disponible, se lo reemplazará por un producto similar de valor igual o superior. Esta es su garantía exclusiva. No intente reparar o ajustar ninguna función eléctrica o mecánica de este producto. Al hacerlo eliminará esta garantía.

La garantía es válida para el comprador minorista original a partir de la fecha de compra inicial y la misma no es transferible. Conserve el recibo de compra original. Para solicitar servicio en garantía se requiere presentar un recibo de compra. Los agentes y centros de servicio de JCS o las tiendas minoristas que venden productos de JCS no tienen derecho a alterar, modificar ni cambiar de ningún otro modo los términos y las condiciones de esta garantía.

Esta garantía no cubre el desgaste normal de las piezas ni los daños que se produzcan como resultado de uso negligente o mal uso del producto, uso de voltaje incorrecto o corriente inapropiada, uso contrario a las instrucciones operativas, y desarme, reparación o alteración por parte de un tercero ajeno a JCS o a un Centro de Servicio autorizado por JCS. Asimismo, la garantía no cubre actos fortuitos tales como incendios, inundaciones, huracanes y tornados.

¿Cuál es el límite de responsabilidad de JCS?

JCS no será responsable de daños incidentales o emergentes causados por el incumplimiento de alguna garantía o condición expresa, implícita o legal.

Excepto en la medida en que lo prohíba la ley aplicable, cualquier garantía o condición implícita de comerciabilidad o aptitud para un fin determinado se limita, en cuanto a su duración, al plazo de la garantía antes mencionada.

JCS queda exenta de toda otra garantías, condiciones o manifestaciones, expresa, implícita, legal o de cualquier otra naturaleza.

JCS no será responsable de ningún tipo de daño que resulte de la compra, uso o mal uso del producto, o por la imposibilidad de usar el producto, incluidos los daños incidentales, especiales, emergentes o similares, o la pérdida de ganancias, ni de ningún incumplimiento contractual, sea de una obligación esencial o de otra naturaleza, ni de ningún reclamo iniciado contra el comprador por un tercero.

Algunas provincias, estados o jurisdicciones no permiten la exclusión o limitación de los daños incidentales o emergentes ni las limitaciones a la duración de las garantías implícitas, de modo que es posible que la exclusión o las limitaciones antes mencionadas no se apliquen en su caso.

Esta garantía le otorga derechos legales específicos y es posible que usted tenga otros derechos que varían de un estado, provincia o jurisdicción a otro.

Cómo solicitar el servicio en garantía

En los Estados Unidos

Si tiene alguna pregunta sobre esta garantía o desea recibir servicio de garantía, póngase visite nuestro sitio web www.pattonproducts.com.

En Canadá

Si tiene alguna pregunta sobre esta garantía o desea recibir servicio de garantía, póngase visite nuestro sitio web www.pattonproducts.com.

INFORMACION DE LA GARANTIA

En los Estados Unidos, esta garantía es ofrecida por Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431. En Canadá, esta garantía es ofrecida por Sunbeam Corporation (Canada) Limited operando bajo el nombre de Jarden Consumer Solutions, 20 B Hereford Street, Brampton, Ontario L6Y 0M1. Si usted tiene otro problema o reclamo en conexión con este producto, por favor escriba al Departamento de Servicio al Consumidor. **POR FAVOR NO DEVUELVA ESTE PRODUCTO A NINGUNA DE ESTAS DIRECCIONES NI AL LUGAR DE COMPRA.**

© 2013 Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions. Todos los derechos reservados. Distribuido por Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431.

155492 Rev A
GCDS-PAT28049-ZZ

PUH4842M_13ESM1

Impreso en China

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect to properly grounded outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
16. When unplugging, be sure to pull by the plug and not the cord.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
19. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.
20. The heater must not be located immediately below a socket-outlet. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS EQUIPPED WITH A 3-PRONG PLUG

GROUNDING (A)
ADAPTER (C)
GROUNDING MEANS (B)

METAL SCREW COVER OF GROUNDED OUTLET BOX (B)

This product is for use on 120 volts. The cord has a plug (A) as shown. An adapter (C) (not included) is available for connecting three-blade grounding-type plugs to two-slot receptacles (B). The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

LEA Y CONSERVE ESTAS IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Para reducir el riesgo de incendios, descargas eléctricas y lesiones personales al utilizar electrodomésticos, siga siempre las precauciones básicas de seguridad, incluyendo las que se mencionan a continuación:

1. Lea todas las instrucciones antes de usar este calefactor.
2. El calefactor se calienta al usarlo. Para evitar quemaduras, NO toque las superficies calientes con la piel. Si existen, utilice las manijas para mover la unidad. Mantenga los materiales combustibles, como muebles, almohadones, sábanas, papeles, ropa y cortinas a por lo menos 3 pies (0,9m) de la parte delantera del calefactor y manténgalos alejados de los costados y de la parte de atrás.
3. Debe tener mucho cuidado cuando el calefactor es utilizado por, o cerca de niños o inválidos, y siempre que se deje el calefactor prendido y desatendido.
4. Siempre desenchufe el calefactor cuando no lo utilice.
5. NO utilice el calefactor si el cable o el enchufe están dañados o luego de una falla, se haya caído o haya sufrido cualquier tipo de daño. Deseche el calefactor o devuélvalo al centro de servicio autorizado para su revisión y/o reparación.
6. NO utilizar en el exterior.
7. Este calefactor no está diseñado para ser utilizado en baños, lavaderos y zonas similares de interiores. NUNCA coloque el calefactor donde pueda caerse dentro de una bañera u otro recipiente con agua.
8. No coloque el cable debajo de la alfombra. No cubra el cable con alfombras, tapetes o artículos similares. No pase el cable por debajo de muebles o electrodomésticos. Coloque el cable lejos del área de tráfico y donde no se tropiece con él.
9. Para desconectarlo, gire el control a la posición OFF, luego quite el enchufe del tomacorriente.
10. Conecte únicamente en tomas con la conexión a tierra adecuada.

ESTE PRODUCTO ESTÁ EQUIPADO CON UN ENCHUFE DE 3 CLAVIJAS

GROUNDING (A)
ADAPTER (C)
GROUNDING MEANS (B)

METAL SCREW COVER OF GROUNDED OUTLET BOX (B)

Este producto funciona con 120 vatios. El cable tiene un enchufe (A), tal como se muestra. Se encuentra disponible un adaptador (C) (no está incluido) para conectar los enchufes de tres patas con conexión a tierra a los tomacorrientes de dos ranuras (B). La conexión a tierra de color verde que se extiende del adaptador debe estar conectada a una base permanente como por ejemplo, una caja de distribución eléctrica correctamente conectada a tierra. El adaptador no se debería utilizar si hay un tomacorriente de tres ranuras conectado a tierra disponible.

11. No inserte ni permita que objetos extraños penetren en la ventilación o salida de aire ya que esto puede causar un choque eléctrico o incendio, o dañar el calefactor.
12. Para evitar un posible incendio, no bloquee las entradas de aire o escape de ninguna manera. No lo use en superficies blandas, como una cama, donde las aberturas se pueden bloquear.
13. Un calefactor tiene partes calientes y que pueden producir chispas en su interior. NO lo utilice en áreas donde se utiliza o se guarda gasolina, pintura o líquidos inflamables.
14. Utilice este calefactor sólo como se describe en este manual. Cualquier otro uso no recomendado por el fabricante puede provocar incendios, descargas eléctricas o lesiones a personas.
15. Siempre conecte el calefactor directamente a un tomacorriente de pared. Nunca lo use con un cable de extensión o con un tomacorriente múltiple.
16. Al desenchufarlo, asegúrese de tirar del enchufe y no del cable.
17. Si el calefactor no funciona, vea las instrucciones específicas del apagado automático de seguridad.
18. NO intente reparar o ajustar ninguna función eléctrica o mecánica de esta unidad. El hacerlo invalidará la garantía. La unidad no contiene partes reparables por el usuario. Toda reparación debe ser realizada únicamente por personal calificado.
19. Deje de usarlo si el cable o el enchufe se calienta. Se recomienda que reemplace el tomacorriente si el enchufe o el tomacorriente se calienta.
20. El calefactor no se debe localizar inmediatamente debajo de un tomacorriente. No use este calefactor en áreas cercanas a un baño, una ducha o una piscina.

FEATURES - OPERATIONS

TECHNICAL SPECIFICATIONS

- Amps: 12.5
- Wattage: 1500W (+5% –15%)
- Working voltage: 120V AC/60Hz

OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. Please save the carton for off-season storage.
2. Make sure the unit is in the OFF (○) position before plugging the heater into the outlet.
3. Place heater on firm level surface.
4. Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.

NOTE: THIS UNIT IS FOR FLOOR USE ONLY.

Mode Control

Turn the Mode Control to the desired setting:

○ - **Off Mode**

If you want to shut off the heater at any time during operation, turn the Mode Control to Off (○) position. Power Light will go off when the heater is turned off.

Fan only Setting

Heater will run at fan-only operation without heat output.

Lo - Low Heat

The heater will run continuously at 750W.

Hi - High Heat

The heater will run continuously at 1500W.

NOTE: To start the heater operation, make sure the Thermostat Control is turned fully clockwise to the highest position (7).


Thermostat Control

1. Before setting the thermostat, allow heater to operate and warm up the room. As noted before, you need to turn the Thermostat Control clockwise to start the heater.

2. When the desired temperature comfort level is reached, lower the thermostat setting until the fan/heater stops operating. This is done by moving the Thermostat Control counter-clockwise toward the Low setting.
3. The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the temperature setting.

NOTE: The Power Light will remain lit during operation.

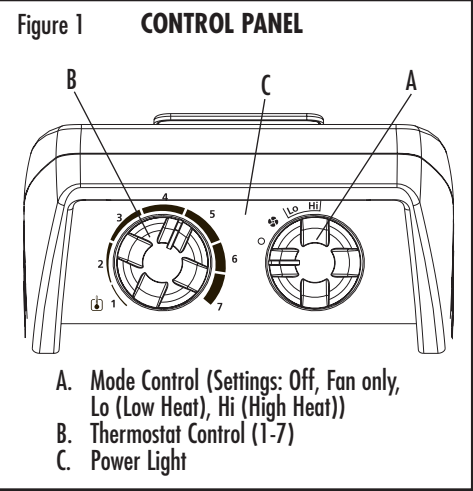

CARACTERISTICAS Y FUNCIONAMIENTO

CONSERVE ESTAS INSTRUCCIONES

ESPECIFICACIONES TECNICAS

- Amperes: 12.5
- Potencia: 1500 W (+5% -10%)
- Voltaje de funcionamiento: 120v CA/60Hz

INSTRUCCIONES DE FUNCIONAMIENTO

1. Saque cuidadosamente el calefactor de la caja. Conserve la caja para guardarlo en el verano.
2. Asegúrese de que esté en la posición OFF (○) antes de enchufarlo en el tomacorriente.
3. Coloque el calefactor en una superficie firme y nivelada.
4. Evite sobrecargar el circuito eléctrico evitando utilizar otro aparato de alta potencia en el mismo tomacorriente. A 1500 Vatios, esta unidad consume 12,5 Amperes.

NOTA: ESTA UNIDAD ES PARA USO EN EL SUELO SOLAMENTE.

Control de modo

Con el Control de modo, seleccione la configuración deseada:

○ - **Modo Apagado**

Si quiere apagar el calefactor en algún momento durante su funcionamiento, gire el Mode Control (Control de modo) hasta la posición Off (○). La luz de encendido se apagará cuando se apague el calefactor.

Configuración Sólo ventilador

El calefactor funcionará en la configuración Sólo ventilador sin emitir calor.

Lo - Calor BAJO

El calefactor funcionará continuamente a 750W.

Hi - Calor ALTO

El calefactor funcionará continuamente a 1500W.


NOTA: Para que el calefactor funcione, asegúrese de girar el Control del termostato en el sentido de las agujas del reloj hasta llegar a la posición más alta (7).

Control de termostato

1. Antes de configurar el termostato, permita que el calefactor caliente la habitación. Como se observó anteriormente, es necesario girar el control del termostato en el sentido de las agujas del reloj para encender el calefactor.
2. Al alcanzar la temperatura deseada, disminuya el ajuste del termostato hasta que el ventilador/ calefactor deje de funcionar. Esto se hace moviendo el control del termostato en sentido contrario al de las agujas del reloj hasta el ajuste Low que es el menor.
3. El control se mantendrá ahora dentro del nivel precalibrado, determinando el arranque y detención (ON y OFF) del calefactor.

NOTA: Es normal que el calefactor se encienda y apague intermitentemente mientras mantiene la temperatura seleccionada. Para evitar que la unidad se encienda y apague, debe aumentar el ajuste del termostato.

NOTA: La luz piloto permanecerá encendida durante el funcionamiento.

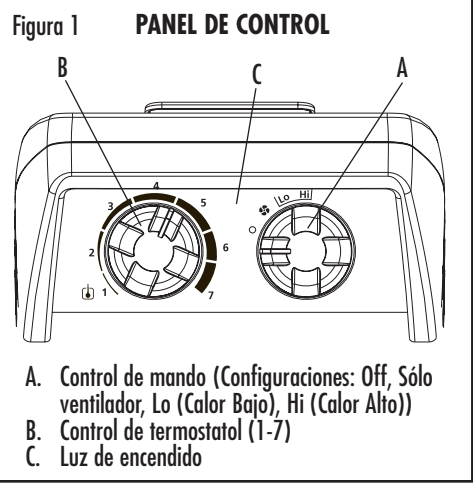

CLEANING / MAINTENANCE TROUBLESHOOTING

CLEANING / MAINTENANCE

Always unplug the heater before cleaning and allow the heater to cool down.

1. Clean the unit with a soft cloth moistened with a mild soap and water solution.
2. NEVER use abrasive or flammable solvents to clean the unit.
3. After cleaning, be sure to completely dry the unit with a cloth or towel.
4. Store heater in a cool, dry location.
5. It is recommended that you store the unit in its original carton.

AUTO SAFETY SHUT-OFF WITH INSTANT TIP-OVER PROTECTION

This heater is equipped with tip-over and overheat shut-off protection.

TIP-OVER SHUT-OFF:

When the unit is accidentally knocked over, it will shut off. To reset, simply place the heater in an upright position on a level surface.

OVERHEAT SHUT-OFF:

When a potential overheat temperature is reached, the system will automatically shut the heater. Make sure heater is clear of all obstructions.

RESET INSTRUCTIONS:

If your heater shuts down:

- 1) Turn Control to OFF (○).
- 2) Unplug the unit and wait 30 minutes.
- 3) Plug in and operate normally.

TROUBLESHOOTING

If your heater fails to operate:

- **UNPLUG THE UNIT** and make sure the heater is placed in an upright position.
- Make sure the electrical outlet or circuit breaker is working.
- Check for obstructions. If you find an obstruction turn the heater OFF, and unplug the unit. Carefully remove the obstruction and follow the reset instructions.
- The temperature may be set too low. Turn the temperature knob clockwise until the heater restarts.
- Make sure Mode Control is in Low or High setting.

Please DO NOT attempt to open or repair the heater.

If you have any questions regarding your product or would like to learn more about other Patton® products, please visit our website at www.pattonproducts.com.

LIMPIEZA / MANTENIMIENTO DIAGNÓSTICO DE PROBLEMAS

LIMPIEZA / MANTENIMIENTO

Siempre desenchufe el calefactor y deje que se enfrie antes de limpiarlo.

1. Limpie la unidad con un paño suave humedecido en una solución suave de agua y jabón.
2. NUNCA utilice solventes abrasivos o inflamables para limpiar la unidad.
3. Luego de limpiarla, asegúrese de secar completamente la unidad con un trapo o toalla.
4. Guarde el calefactor en un lugar frío y seco.
5. Se recomienda guardar la unidad en su embalaje original.

AUTOAPAGADO DE SEGURIDAD CON PROTECCIÓN INSTANTÁNEA CONTRA VOLCADURAS

Este calefactor cuenta con un Sistema Completo de Seguridad con protección contra caídas que apagará el calefactor en caso de sobrecalentamiento.

Autoapagado por volcadura :

Esta estufa se apagará si se vuelca accidentalmente. Para reactivar la estufa, simplemente colocarla de pie en una superficie nivelada.

Autoapagado por recalentamiento :

Si el calefactor se recalienta, el sistema lo apagará automáticamente. Asegurarse que la estufa no tenga obstrucciones.

INSTRUCCIONES VOLVER A ENCENDER

Si la unidad se apaga:

- 1) GIRE el Control a APAGADO (○).
- 2) Desenchufe la unidad y espere 30 minutos.
- 3) Enchufela y vuélvala a operar normalmente.

DIAGNOSTICO DE PROBLEMAS

Si su calefactor no funciona:

- **DESENCHUFE LA UNIDAD** y asegúrese de que el calefactor esté en posición vertical.
- Asegúrese de que el tomacorriente o llave térmica funcionen correctamente.
- Verifique que no haya ninguna obstrucción. Si encuentra una obstrucción, apague el calefactor, y **DESENCHUFELO**. Quite cuidadosamente la obstrucción y siga el procedimiento para reiniciar la unidad.
- Es posible que la temperatura esté muy baja. Gire el control del termostato en el sentido de las agujas del reloj hasta que se reinicie el calefactor.
- Asegúrese que el control de mando esté en la posición Bajo o Alto.

NO intente abrir o reparar el calefactor.

Si tiene preguntas relacionadas con este producto o si está interesado en conocer otros productos Patton®, póngase visite nuestro sitio web www.pattonproducts.com.